

# RobLight



---

**FL 500 B-1**

---

**User manual**

# RobLight

## Introduction

---

The RobLight FL 500 B-1 light generator is designed for indoor use in dry locations with glass and PMMA fibre harness Ø9 mm. It can be used in all installations set-ups, including closed compartments if limits for max ambient temperature are followed.

## Product overview/unboxing

---

1 FL 500 B-1  
1 User manual

### Applies to :

0120 7011	FL 500 B-1 Ø9mm 3000K
0120 7012	FL 500 B-1 Ø9mm 2700K
0120 7015	FL 500 B-1 Ø28mm 3000K
0120 7711	FL 500 B-1 Ø9mm 3000K 1-10V

## Installation instructions

---

Follow the installation instructions to ensure

- Safe operation
- Full functionality
- Stated expected lifetime
- Uninterrupted illumination

# RobLight

## Warning

---

This device has a built in high power phosphor converted blue led. The light source is grouped in Risk Group 2.

## Risk group 2

---



CAUTION.  
Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eye.

Do not look into the light port when lit.

Beware of placing highly light absorbing material directly in front (Distance 0-1cm) of the port or a fibre. The extremely high intensity will increase the temperature in the material.

Using non RobLight harnesses in this light generator is at its own risk.

Ensure that the polyconnector is undamaged and clean before using the light generator in retrofit RobLight installations.

Beware that when the or a light generator is operated at max ambient temperature the surface temperature can exceed 75°C.

The light generator is only tested with RobLight standard polyconnector end.

## Warranty label

---

The warranty label is not to be broken under ANY circumstances. If broken the warranty is terminated.

## Technical data

---

### General

---

Light port	Ø9/Ø28 mm
Fibre type	PMMA or glass
Material	Aluminium, POM and other
Dimensions (L x H x W)	100 x 52 x 51 mm
Weight (total)	500 g
Safety	CE, RoHS, WEEE, F

### Environmental

---

Protection rating	IP 20
Thermal protection	Integrated auto
Cooling	
Ambient temperature	-10° to 45° C

### Driver/electrical

---

Driver	LED driver constant current
Supply voltage (mains)	100-240V 50/60Hz
Driver expected lifetime	50.000 hours (@TC = 65° C)
Total power consumption	8 W
Dimmer systems applicable	Pot, PUSH (mains)

### Light source

---



Applied LED	Cree
LED expected lifetime	>25.000 hours @Ta = 25° C
Typical CCT	2700K or 3000K
Typical Ra (CRI <sub>1-8</sub> )	90+

# RobLight

## Installation instructions

---

- a) Remove cap from the light port
- b) Check that the end face of the polyconnector is clean and undamaged
- c) Insert the poly connector fully in the light port
- d) Tighten the screw onto the light port with an Allen key
- e) Ensure all installation and ventilation requirements are met
- f) Connect the supply cord to the mains

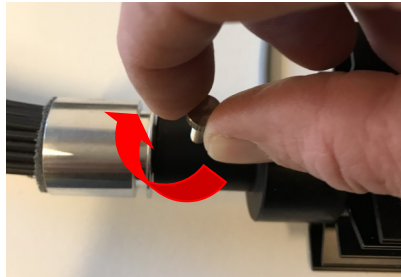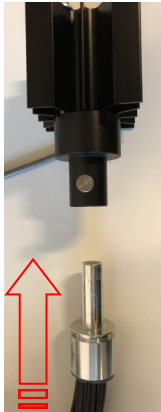

# RobLight

## Surface mounting

---

This light generator should not be mounted with light port upwards. At high ambient temperature the operational lifetime of the internal components and harness will be reduced.




## Mounting (Accessories)

---

Attach to surface using 2 screws in the baseplate holes.

Be aware that the total weight of this system is more than 0,5 kg + the downforce from the fibre harness.

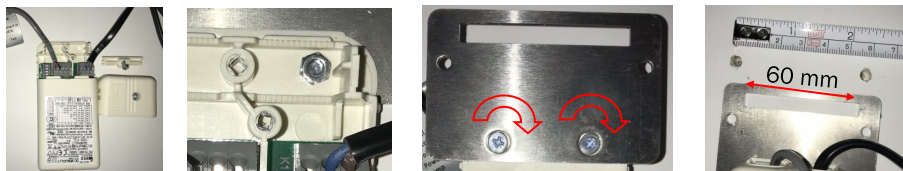

## Closed compartments

---

MAX AMBIENT TEMPERATURE 45°C.

Recommendations: (should always be tested in a mock up)

Secure enough space to allow natural heat transmission through surfaces.


Surfaces should not be insulated.

Cooling air for the polyconnector can not be obstructed in any way, as it is essential to avoid damage to the harness.

General minimum distance from the light generator to any enclosing surface 10 cm (excluded mounting surface).

Beware of inlet and outlet ventilation holes opposite each other as shown on the drawing.

Keep free from dust and polluted air.

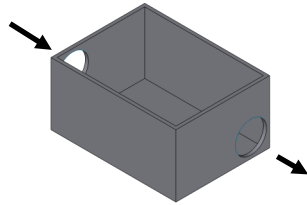

## Installing adjacent light generators

---


Recommendation:

Minimum 10 cm distance between adjacent light generators to ensure enough free cooling air.

If multiple rows, use offset to avoid vertical rows. Minimal free distance between rows 15 cm.



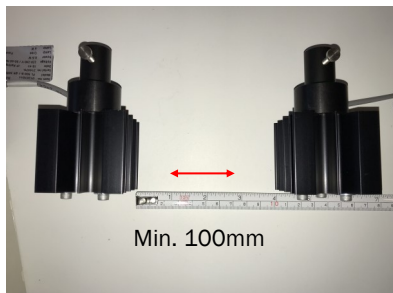

Max temperature has to be observed for all light generators measured at air inlet for each light generator.

MAX AMBIENT TEMPERATURE 45°C.





# RobLight

## Accessories / Spare part

	Part name	Description	Item no.
	Adapter Ø28/Ø9	To change the light port from Ø28 to Ø9 mm	7800 0130
	Mounting kit		0126 7001
	Dimming 1-10V	Potentiometer	0126 5110
	Driver DC Mini Jolly	Driver	1100 3068

## Installing accessories

Dimming 1-10V. Connect potentiometer

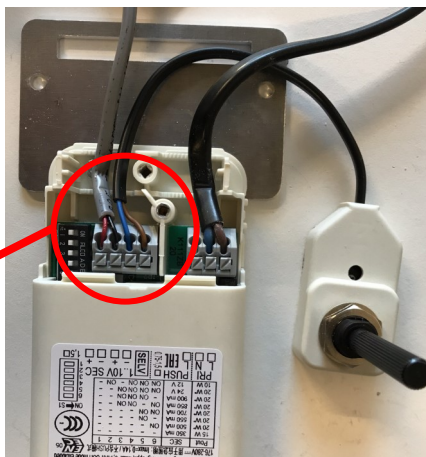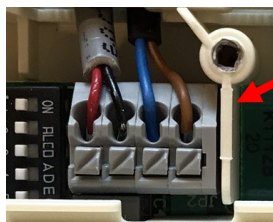

## Maintenance, spare parts and repairs

---

The effectiveness of the active cooling device is greatly diminished if the cooling fins and the air intake is blocked or polluted with dust. This will reduce the expected lifetime of the product.

The dust must be removed on a regular basis. Interval depending on the environment.

A fine brush, vacuum cleaning or light compressed air can be used for the cleaning.

This light source is not supposed to be otherwise serviced, if used as recommended.

The fan can be replaced using standard tools. A replacement kit with guide is available.

If the product is not performing as specified, use the troubleshooting guide. If you need further assistance, please contact RobLight.

# RobLight

## Application notes

---

The light generator is an electronic device and must be handled accordingly. The different components will have different factors influencing the practical lifetime. The most important factor for this system is the condition of the surrounding air (temperature and cleanliness). The data we have stated about or and the expected lifetime of the key components, are at the temperatures that the suppliers have performed during their standardized tests in clean environments.

The light generator is designed to run at max ambient temperature, but the longest usable operation is achieved with lower temperatures.

Although there is thermal protection built into this device, it is only a safety device and should not be used as a measurement device to test if the light generator is running at a tolerable surrounding temperature.

The polyconnector is the most stressed part of this system. Care should be taken to ensure that the fibre ends are 100% clean and free from dust and grease (fingerprint will do damage.). See [www.rob-light.com](http://www.rob-light.com) for recommendations to clean fibre ends.

Running the light generator at too high temperatures will not only risk damage to the light source but also to the fibre harness.

**KEEP COOL**

**CLEAN AIR**

## Troubleshooting

Problem	Trace the problem	Solution
No light	Check the power	Connect the power cord properly Turn on the device
	Check the temperature	Check if it is installed according to the instructions
	Check the dimming	Unplug the light generator. Unplug the dimmer system from the driver. Turn on the power
Light switches on and off	Check the operating conditions of the light generator	Check if it is installed according to the instructions
	Check the active cooling system	Remove dirt and dust from the light generator

If problems are not solved using this guide, please contact

RobLight

RobLight